

## CHAPTER 3: REAR END

3-1	SPECIFICATIONS AND STANDARDS FOR REAR END .....	3- 1
3-2	DISASSEMBLY AND REASSEMBLY OF REAR END .....	3- 2
3-3	REAR SUSPENSION SPECIFICATIONS .....	3- 8
3-4	REAR SUSPENSION COMPONENTS .....	3- 9
3-5	DIASSEMBLY AND REASSEMBLY OF REAR SUSPENSION .....	3-10
3-6	REMOVAL OF REAR AXLE .....	3-13



## CHAPTER 3. REAR END


### 3-1: SPECIFICATIONS AND STANDARDS FOR REAR END


	SEDAN	CUSTOM
Suspension	Independent Suspension	Independent Suspension
Load on Empty Load	260 kg (573 lb)	285 kg (628 lb)
Rear Sheels Normal Load	380 kg (837 lb)	405 kg (892 lb)
Distance between Wheels	1070 mm (42.1 in)	1070 mm (42.1 in)
Rear Tire	4.80 x 10 - 2P	4.50 x 10 - 4P
Rear Hub Bearing (Inner)	No. 6206	No. 6206
Rear Hub Bearing (Outer)	No. 6205	No. 6205
Rear Tire Pressure	1.7 - 1.85 kg/cm <sup>2</sup> (24 - 26 psi)	1.9 - 2.0 kg/cm <sup>2</sup> (27 - 28.5 psi)

#### GENERAL DATA:

Whether empty or loaded, approximately 59 percent of the gross vehicle weight will always be bearing on the rear end. The rear suspension system is of the independent suspension type with torsion bar and incorporates shock absorbers to provide superior riding comfort and stability.

#### DRAWING SHOWING CONSTRUCTION OF REAR END

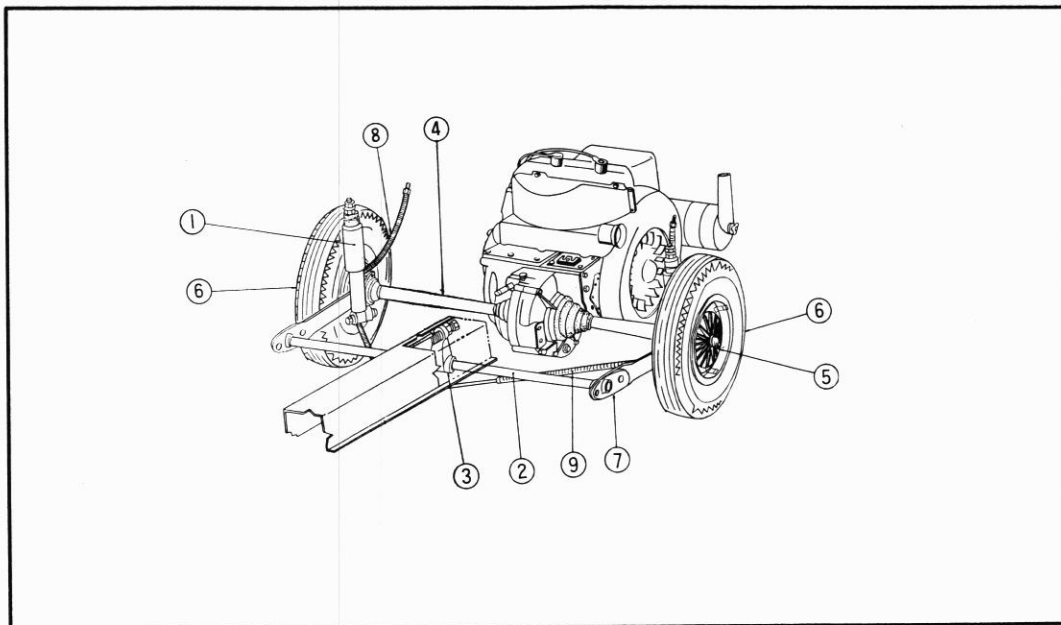

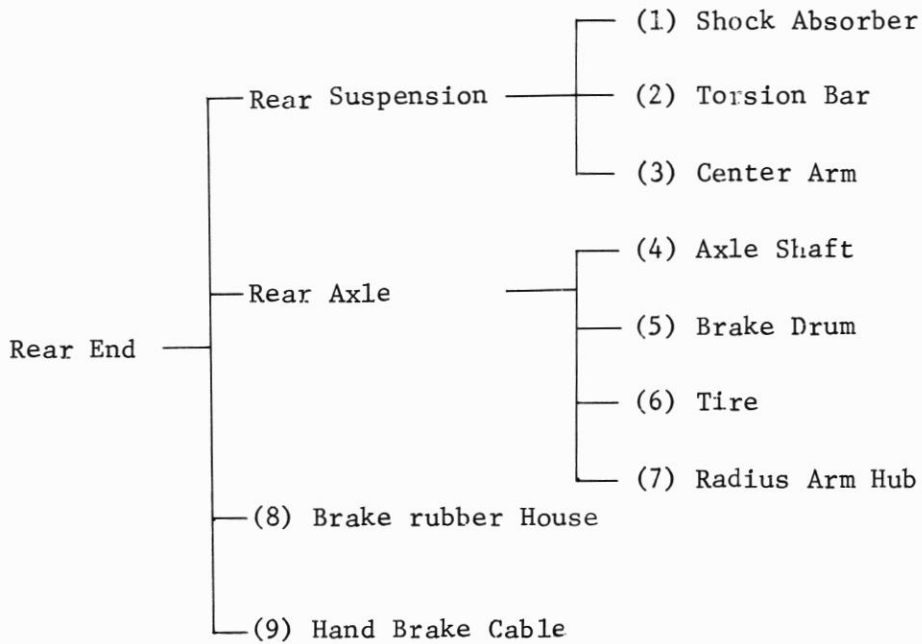

### 3-2: DISASSEMBLY AND REASSEMBLY OF REAR END

#### A. DISASSEMBLY OF REAR END ASSEMBLY

(a) Place the vehicle over a work pit or raise it on a jack.



b) Remove the wheel cap. Loosen the four 8 mm wheel nuts joining the rim and brake drum. Pull off the tire.